CONTENTS

TITLE	PAGE
	٠
I. Introduction	1
II. Specifications	1
III. Symbol Definition and Button Location	ion 2
IV. Operation Instructions	3
4.1 Power-Up	
4.3 Selecting the Temperature Scale 3	3
4.4 Data-Hold Operation	3
4.5 DataLogger 3	3
val S	4
4.8 Time Operation	4
4.10 Auto Power Off	4
4.11 Low Battery Condition4	4
4,12 Calibration Point 4	4
4.13 Digital Output	5
V. Setup SE-305 (Thermo DataLogger)—RS232 interface	-RS232 interface
software 7	7

Data Logger Instruction Manual

I. Introduction:

temperature/voltage table for K-type thermocouples. Its internal memory can keep up to 16312 records.(note1.) It uses RS232 interface to perform bi-directional communication with PC. This instrument is a digital thermometer for use with any K-type thermocouple as temperature sensor. Temperature indication follows National Bureau of Standards and IEC584

II. Specifications:

Numerical Display: 4 digital Liquid Crystal Display

Measurement Range: -200°C ~ 1370°C; -328°F ~ 2498°F

Resolution: -200°C~ 200°C -200°F~ 200°F 0.1°C; 200°C ~1370°C 1°C 0.1°F; else 1°F

Input Protection at Thermocouple Input: 60V DC, or 24Vrms AC

Environmental:

Operating Temperature and Humidity: 0° C $\sim 50^{\circ}$ C $(32^{\circ}$ F $\sim 122^{\circ}$ F); $0 \sim 80\%$ RH Storage Temperature and Humidity: -10° C to 60° C $(14^{\circ}$ F $\sim 140^{\circ}$ F); $0 \sim 80\%$ RH Altitude up to 2000 meters.

Accuracy: at (23 ± 5°C)

Range	Accuracy
-200°C ~ 200°C	±(0.2% reading + 1°C)
200°C ~ 400°C	±(0.5% reading + 1°C)
400°C~1370°C	±(0.2% reading + 1°C)
-328°F ~ -200°F	±(0.5% reading + 2°F)
-200°F ~ 200°F	±(0.2% reading + 2°F)
200°F ~ 2498°F	±(0.3% reading + 2°F)
•	

Temperature.Coefficient:

For ambient temperatures from $0^{\circ}\text{C} \sim 18^{\circ}\text{C}$ and $28^{\circ}\text{C} \sim 50^{\circ}\text{C}$, for each $^{\circ}\text{C}$ ambient below 18°C or above 28°C add the following tolerance into the accuracy spec.

0.01% of reading + 0.03°C (0.01% of reading + 0.06°F)

Note:

ωωωω444

probe accuracy specification for additional details. The basic accuracy Specification does not include the error of the probe. Please refer to the

Sample Rate: 1.25 times per second

Dimension: 184×64×30mm

Weight: 210g Approx.

Accessory: K Type Bead Probe, Battery, Carrying Case, Instruction Menu, Soft Ware Package

(Program, RS232 Connection Cable)

Power requirement: 9 Volt Battery

Battery Life: Approx. 100hrs with alkaline battery

AC Adapter: 9VDC ±15% 100mA

Plug Diameter: 3.5mm×1.35mm

Option: AC Adapter, USB Cable

Every time you press "REC" button to start recording data and press "REC" button again to stop is full. recording, there will be a data set in memory, you can store as many data sets as you want until memory

III. Symbol Definition and Button Location:

: This indicates that the minus temperature is sensed

Ç. F : Centigrade and Fahrenheit indication.

: Thermocouple Type Indication

MAX: The Maximum value is now being displayed

₹ : The Minimum value is now being displayed

0 : This indicates auto power off is enabled

: This indicates that the display data is being held

파스 : it indicates the value below is hour and minute : it indicates the value below is month and day

1:1


m:s : it indicates the value below is minute and second

4 : it indicates year is displayed in the main window

: The Battery is not sufficient for proper operation

REC : This indicates that the tester is recording. If it blinks, it indicates the memory is full



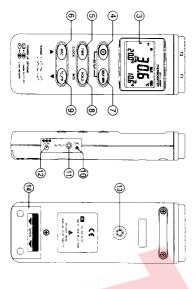

Button Location:

- K type temperature sensor T1 input
- (2) K type temperature sensor T2 input connector
- (3) LCD display
- ON/OFF button
- ® Record button Time display buttor
- MAX MIN function control button
- B HOLD button
- Offset calibration screw

[®] °C, °F control button

- ① Digital output connector
- (2) AC power adapter connector
- Tripod connector
- Battery cabinet cover

IV. Operation Instructions:

4.1 Power-Up

space is available to use. When the user powers on, the LCD will show how much memory Press the power button to turn the thermometer ON or OFF.

For example: It indicates that there are 16,000 records memory space available

4.2 Connection the Thermocouples

For measurement, plug the thermocouple into the input connectors.

4.3 Selecting the Temperature Scale

When the meter is first powered on, the default scale setting is set at Celsius (°C) scale. The user may change it to Fahrenheit (°F) by pressing "°C/°F" button and vice versa to Celsius. Next time you power on, the scale setting will be the same as which when you powerd off last time

4.4 Data-Hold Operation

When the held data is no longer needed, one may release the data-hold operation by pressing "HOLD" button again. The user may hold the present reading and keep it on the display by pressing the "HOLD" button.

disabled. (when you press "TIME", "°C/"F" and "max min" button in HOLD mode, there will be two continuous beeps) When the meter is under Data Hold operation, the "TIME", "MAX MIN" and " °C/°F" button are

To exit the MAX/MIN mode, one may press and hold "MAX MIN" button for two seconds.

4.5 DataLogger:

and pressing the "REC" button again will stop recording, If you seconds, then release all buttons ,then LCD will show "CLR" to clear the memory. "REC" button and then press power button and hold at least 2 want to clear the memory, power off the meter, then press and hold When one presses the "REC" button, the meter will start recording

4.6 Clock Setup :

1: press and hold "MAX MIN" button and then power on the meter:

2: press "TIME"(clock):

 press "REC" ▲ or "°C/°F" ▼ to increase or decrease number, press "TIME"(clock) to adjust next item. The adjusting order is year→month→day→hour→minute, then press "TIME" (clock) to power button to cancel. finish adjusting. If you want abort during a setup process, press

4.7 Recording Interval Setup:

1nt 8888

1: press and hold "MAX MIN" button and then power on the meter:

2: press "HOLD"(INTV)

 press "REC" ▲ or "°C/°F" ▼ to increase or decrease number. to finish. If you want abort during a setup process, press power press "HOLD" (INTV) to adjust next item, then press "HOLD" (INTV) button to cancel.

4.8 Time Operation:

the recording and "MAX MIN" operation. the LCD. Press "TIME" button or any other button will exit this mode. This operation will not interrupt show month and day on the left bottom of the LCD, show hour and minute on the right bottom of When pressing the "TIME" button, the LCD will display time , it will show year on top of the LCD

4.9 MAX/MIN Operation:

sample of data. maximum value, minimum value is kept in the memory simultaneously and updated with every new When pressing the "MAX MIN" button the meter will enter the MAX/MIN mode. Under this mode the

When the MAX symbol is display, the Maximum is shown on the display

in the memory and the reading is the present temperature. Press "MAX MIN" again, MAX, and MIN will blink together. This means that all these data is updated Press "MAX MIN" again, then the MIN symbol is on the display and also the minimum reading

One may press "MAX MIN" to circulate the display mode among these options

" °C/°F" button in "MAX MIN" mode, there will be two continuous beep) When the meter is under "MAX MIN" operation and " °C/°F" button are disabled (when you press

To exit the MAX/MIN mode, one may press and hold "MAX MIN" for two seconds

4.10 Auto Power Off:

By default, when the meter is powered on, it is under auto power off mode. The meter will power combination at power on can disable auto power off. itself off after 30 minutes if no key operation and no RS232 communication and no recording

successive beeps to indicate that auto power off is disabled and the 🔾 will not show up One may press and hold "HOLD" button and then power on the meter and there will be two

4.11 Low Battery Condition

LCD and the battery need to be replaced with new one. When the battery voltage is under proper operation requirement, the [=+] symbol will show on the


4.12 Calibration Point:

±1°F	VR4	1900 °F	
±1°C	VR3	1000 °C	
± 0.1 °C	VR2	190 °C	
± 0.1 °C	VR1	0°C	
tolerance	Adjust VR	input	

stabled ice water through VR1 will give a very good calibration result Normally, performing offset Calibration with thermal

4.13 Digital Output:

The TX is a 5V normal high output port The RX is a 5V normal high input port. The Digital Output is a 9600bps N 81 serial interface

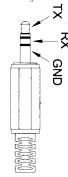

The command of Digital Output is list below:

RS232 command	Function	Remarks
K(ASC 4BH)	Ask for model No.	Return 4 bytes
A(ASC 41H)	Inquire all encoded data	Return encoded 10 byte
H(ASC 48H)	Hold button	
M(ASC 4DH)	MAX/MIN button	
N(ASC 4EH)	Exit MAX/MIN mode	7
T(ASC 52H)	TIME button	
C(ASC 43H)	C/F button	
U(ASC 55H)	Dump all memory of thermometer	return 32768 bytes
P(ASC 50H)	Load recorded data	

Command K:

ASCII(13) Return 4 bytes. For example, when sending command "K" to the meter, it will return "3","0","6"

Command U:

Return 32768 bytes

Command P:

Instead of returning all 32768 bytes, it only return recorded data

Command H:

Equivalent to one pushing on the HOLD button and no message is returned.

Command M:

Equivalent to one pushing on the MAX/MIN button and no message is returned

Command N:

Equivalent to one pushing and hold the MAX/MIN button for two seconds to exit MAX/MIN mode.

Command T:

Equivalent to one pushing on the TIME button and no message is returned

Command C:

Equivalent to one pushing on the °C/°F button and no message is returned

Command A: Ind BYTE:

The first byte is the start byte, it value is 2.

2nd BYTE:

REC	≦Z	MAX/	TIME		Hold	Low Bat	C/F
bito	bit1	bit2	bit3	bit4	bit5	bit6	bit7

bit 0: 1→recording mode, 0→not recording

bit 2 bit 1

<u></u>	1 0	0	-
→calculate MAX/MIN in background mode .	→ MINIMUM mode	→ MAXIMUM mode	→normal mode

bit3: 1→Indicates the LCD is displaying time

bit4: no use

bit5: 1→HOLD, 0→not HOLD

bit6: 1→LOW BATTERY, 0→BATTERY NORMAL

bit7: 1→°C 0→°F

2	sign	resolution		sign	resolution	memory full	Auto Power Off
bito	bit1	bit2	bit3	bit4	bit5	bit6	bit7

bit0: $1 \rightarrow T$] is OL, $0 \rightarrow$ not OL

bit1: 1→T1 value is minus, 0→T1 value is plus

bit2: 1→4th byte and 5th byte represent #### , 0→4th byte and 5th byte represent ###.#

bit3: 1→T2 is OL, 0→not OL

bit4: $1 \rightarrow T2$ value is minus, $0 \rightarrow T2$ value is plus

bit5: $1 \rightarrow 8^{\text{th}}$ byte and 9^{th} byte represent #### , $0 \rightarrow 8^{\text{th}}$ byte and 9^{th} byte represent ###.#

bit6: 1→Memory is full. 0→Memory is not full

bit7: 1→Auto power off enabled. 0→Auto power off disabled

BYTE: first two BCD code of T1 value.

BYTE: last two BCD code of T1 value

If bit3 of 2"d BYTE =1: two BCD code of month If bit3 of 2" BYTE =0: first two BCD code of T1-T2 value

 7^{th} BYTE:

If bit3 of 2nd BYTE =1: two BCD code of day If bit3 of 2nd BYTE =0: last two BCD code of T1-T2 value

If bit3 of $2^{nd}BYTE = 0$: first two BCD code of T2 value.

If bit3 of 2nd BYTE =1: two BCD code of hour.

9th BYTE:

If bit3 of 2" BYTE =0: last two BCD code of T2 value

If bit3 of 2"d BYTE =1: two BCD code of minute.

BYTE: end byte, it value is 3, 1nd and 10th are used to check frame error.

Appendix: Thermo couple probe specification

Model	Range	Tolerances	Description
TP-K01	-50°C to 200°C	±2.2°C or ±0.75%	with Teflon tape insulation Maximum
Bead probe	-58°F to 392°F	(±3.6°F or ±0.75%)	insulating temperature : 260℃
TP-K01:			
probe for ge	eneral condition me	probe for general condition measurements, especially for	
complex an	complex and hard to reach places	ices.	

6

V. Setup SE-305 (Thermo DataLogger)—RS232 interface software:

The SE-305 package contains:

1.One setup CD

2.Custom designed RS232 cable for SE-305

System Required:

Windows 98/ NT 4.0/ NT2000/ XP/ VISTA

Minimum Hardware Required:

486-100 MHz PC compatible, 16 MB RAM

At least 5 MB hard disk space available to install SE-305 program. Recommended display resolution is 800X600


Install SE-305:

1.We recommend close all other application before installing SE-305

disk(default is c:\program files\ SE305) If it does not, you can start it by running SETUP.EXE from the root drive of the CD-ROM. 3. When installation is complete, it will copy SE305 exe(executable file) and help file to your hard 2.Insert the SE-305 CD-ROM into your CD drive. The SE-305 installer should start automatically.

4. For other operation instruction, please refer to the on-line help while executing SE-305

Main Menu

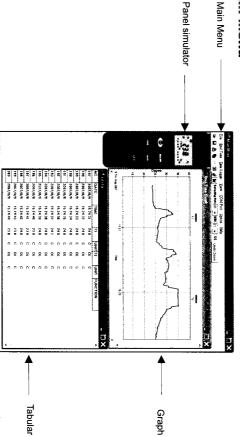

File | Open- Retrieve files from the disk.

Print - Print the data of the active window (graph or list) Save - Save the active window (when the caption bar is highlighted) data to the disk.

Printer Setup - Select printer.

File | Exit: Terminates SE305 program

View | Control Panel:

By opening the Panel Window, the user can control meter via the button in this window.

View | Real-Time Graph:
Open Real-Time Graph display to graph the present data.

Real Time | Run - Start collecting real time data . Stop - Stop collecting real time data .

DataLogger:

By opening the DataLogger Window, the user can load recorded data of meter to PC in this

ComPort: Select the port manually.

Option: | Range : Change the Y axis extention.
Graph Customization : Graph Customization.

SE-305. For more operation instruction, please refer to the online help while executing

